

Brunswick®



Official Lane Maintenance and Capital Equipment Provider

DIRECT+

Conditioning System



ENVOY



AUTHORITY22®

Select Machine

Pattern Information

Date **1-Dec-12**
Pattern Type **Competitive**
Pattern Difficulty **Medium**
Pattern Designer **BRUNSWICK**
Pattern Volume (ml) **22.47**

Surface Information

Surface Type
Surface Brand
Age

Pattern Parameters

Pattern Number **5**
Pattern Name **INFERNO**
Mode **Clean & Oil**
Forward Speed **Max Clean**
Start Cleaner Spray **0**
Start Squeegee **0**
Start Oiling **6**
Split Pattern **No**

Supplies Information

Lane Cleaner
Cleaner Mixture Ratio **: 1**
Cleaner Transition Distance **41** Authority22
Cleaner Spray End Distance **53** Envoy
Lane Conditioner

Notes

Zone	1	2	3	4	5	6	7	8
Zone End Distance	8	16	22	27	32	39		
Zone Ratio	L 2.5 : 1 R 2.5 : 1	4.1 : 1 4.1 : 1	4.2 : 1 4.2 : 1	4.0 : 1 4.0 : 1	4.3 : 1 4.3 : 1	### : 1 ### : 1	### : 1 ### : 1	### : 1 ### : 1
Zone Volume (ml)	8.22	6.50	3.84	2.21	1.70	0.00	0.00	0.00

ZONE	7 Pin Side												Board Number												10 Pin Side														
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1
1	25	25	25	25	25	30	60	65	73	73	81	81	85	85	85	85	85	85	85	85	85	85	85	85	85	85	81	81	73	73	65	60	30	25	25	25	25	25	25
2	18	18	18	18	18	18	18	23	55	66	66	71	75	75	75	75	75	75	75	75	75	75	75	75	75	75	71	66	66	55	23	18	18	18	18	18	18	18	18
3	14	14	14	14	14	14	14	16	43	51	51	55	60	60	60	60	60	60	60	60	60	60	60	60	60	60	55	51	51	43	16	14	14	14	14	14	14	14	14
4	11	11	11	11	11	11	11	11	11	13	35	42	45	45	45	45	45	45	45	45	45	45	45	45	45	45	42	35	13	11	11	11	11	11	11	11	11	11	
5	8	8	8	8	8	8	8	8	8	10	27	33	35	35	35	35	35	35	35	35	35	35	35	35	35	35	33	27	10	8	8	8	8	8	8	8	8	8	
6	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7																																							
8																																							

